

# USER INSTRUCTIONS FOR SUPERCLENS STEAM 'N' VAC CLEANING MACHINE

## I. SAFETY - IMPORTANT - Please read before use

**This machine delivers hot steam at high pressure through the handle and its accessories. DO NOT allow steam to come into contact with bare skin. NEVER aim the steam directly at people or animals or electrical sockets. Do not use it to clean the machine itself. Always use protective goggles and/or gloves where necessary. Never put detergents or fragrances in the boiler.**

Before use carry out a visual inspection of the machine. Make sure the flex and plug are undamaged. Check the body of the machine for damage. If there is any damage DO NOT use the machine; contact the store for a replacement.

Familiarise yourself with this machines operation before use, and use safety goggles and gloves, if operating in confined spaces or cleaning overhead surfaces.

Never aim the steam at electrical installations. Only clean electrical machines where this is allowed by the manufacturer.

When carrying out a function check direct the steam nozzle away from yourself. (Check all accessories are present in your Steam'n'vac kit. if they are damaged return to store).

The machine must only be used in the horizontal position, with all three wheels on a solid flat surface.

Do not allow the cable to come in contact with any surface or objects that could damage it.

The machine has parts that heat up when in use, please exercise caution when using the machine. Never allow children near the machine when in use.

Never leave the machine unattended when it is plugged in. When the machine is not in use; disconnect it from the mains.

Always turn off the steam by the button on the trigger before fitting or changing tools. Ensure the tool has cooled down before handling.

Keep the machine above freezing temperature and do not use boiling water on the machine. Never put the machine in water.

Allow the machine to cool down before handling.

**Always prime the waste tank with cold water as this acts as a filter.**

**Pressurized steam is a very effective cleaning medium; always perform a colourfast test in an inconspicuous area on fabrics. If you are in any doubt about cleaning any material or substrate always check with the manufacturer first.**

## 2. GETTING STARTED



**Step 1**  
Release grips and remove **transparent cover**



**Step 2**  
Remove Waste tank and fill to the minimum mark. Then replace waste tank and transparent cover and lock into place.



**Step 3**  
Open filling point, insert funnel and fill the boiler with cold water:(max 1.4L)Then close filling point.



**Step 4**  
Open the front panel and connect the steam hose



**Step 5**  
Plug the power cable into a suitable electrical socket Press the on/off switch to on at the back of the machine.



**Step 6**  
Press the Steam footswitch once, the amber light will start to flash.After approximately 10 minutes the amber light will stop flashing . (during use it is normal for the amber light to flash).Once the amber light stops flashing,this indicates that the steam has reached its operating pressure.




**Step 7**  
Turn the steam pressure to the required setting. Refer to the cleaning guide for settings.



**Step 8**  
Select required accessory and push firmly onto the pistol grip.



**Step 9**  
Activate steam function by pressing and holding the steam symbol on pistol grip trigger until the indicator light comes on.Steam can then be released by depressing the trigger.

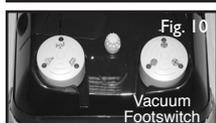

**Step 10**  
Activate vacuum extraction by pressing the vacuum footswitch and pressing the vacuum symbol on the pistol grip (Fig 10a).You can increase/decrease the vacuum power by holding your thumb on this switch.



**Running out of water for steam cleaning** - When the red light on steam footswitch comes on simply repeat step 3. The machine does not need to be turned off and you can recommence steaming immediately

**Waste bucket full** - Check the waste bucket at regular intervals and empty as necessary following steps 1 and 2 above ensuring that the machine has been switched off first. If the waste bucket reaches maximum fill an audible alarm will sound and the vacuum will cut out. Empty the waste bucket immediately

## 3. CLEANING GUIDE (please turn over)

## 4. FINISHING OFF

1. Switch off machine and unplug the Steam 'n' vac; allow it to cool before disassembly and cleaning
2. Disconnect any accessories connected to the pistol grip.
3. Please rinse and dry any accessories used before packing in their accessory bag.
4. Clean the machine by emptying and rinsing the grey waste tank and transparent cover..
5. Replace the waste tank and transparent cover and lock clamps

REMEMBER PLEASE CLEAN THE MACHINE BEFORE RETURNING IT THE STORE.

**HELP LINE** - If at any time you have any problems or queries with the operation of the machine please ring **01 13 200 8220** or go to **www.clantex.co.uk**

If you had a good experience with Supercleans products tell your friends if not tell us on 01 13 200 8220

## CLEANING GUIDE (popular cleaning tasks)

CLEANING TASK	TOOLS/ATTACHMENTS	STEAM SETTING	VACUUM SETTING	METHOD
TAPS AND SANITARY WARE	DETAIL BRUSH DETAIL BRUSH NOZZLE VACUUM ATTACHMENT	HIGH	ON	Pre-spray with multi surface degreaser. Aim steam jet directly at dirty areas, agitate difficult marks with detail brush
KITCHEN WORK TOPS	SMALL SQUEEGEE	MEDIUM	ON	Keeping the tool in contact with the surface draw blade backwards.
DEFROSTING FRIDGES & FREEZER	TRIANGLE BRUSH TRIANGLE BRUSH NOZZLE VACUUM ATTACHMENT	MEDIUM	ON	Only use steam on appliances where the manufacturer allows. Disconnect appliance from the mains and empty. Direct steam jet at the walls, and vacuum residual moisture away. Mop dry with an Absorbent cloth.
SHOWER CUBICLE CORNERS AND DETAIL	DETAIL BRUSH DETAIL BRUSH NOZZLE VACUUM ATTACHMENT	HIGH	ON	Direct jet at corners, grooves and detail. AVOID prolonged direction of steam jet at silicone shower seals. Use detail brush to agitate difficult spots and stains.
WINDOWS, GLASS AND MIRRORS	SMALL SQUEEGEE OR LARGE SQUEEGEE	MEDIUM	ON	DO NOT direct steam jet on silk printed or painted glass. To prevent thermal shock always preheat cold glass by initially steaming from a distance of 30-40cms. working down the surface quickly with the rubber blade pressed firmly to the glass.
GROUTING	DETAIL BRUSH DETAIL BRUSH NOZZLE VACUUM ATTACHMENT	HIGH	ON	Simultaneously direct steam into the grout line with the small detail nozzle and agitate the ground in dirt with the detail brush.
SPOT CLEANING UPHOLSTERY AND FURNISHINGS	DETAIL BRUSH (Optional) DETAIL BRUSH NOZZLE VACUUM ATTACHMENT	MEDIUM	ON	The brush appliance can be used on most plastic furniture. Be careful when using on polished or lacquered surfaces. Carry out a test on an inconspicuous area. Direct steam at spots in short intervals & extract residual moisture with vacuum. Repeat as necessary.
UPHOLSTERY, SOFT FURNISHING & MATTRESSES	UPHOLSTERY TOOL	HIGH	ON	Maintaining light pressure on the upholstery tool; draw it across the material. With velvet fabrics only clean in the direction of the pile.
CARPETS	FLOOR TOOL 2 PIECE EXTENSION	HIGH	ON	Press the cleaning head down lightly and draw the tool backwards and forwards across the carpet pile.
HARD FLOORS (TILES & VINYL)	FLOOR TOOL HARD FLOOR INSERT 2 PIECE EXTENSION	HIGH	ON	Remove grooved base from floor tool by pressing tab & replace with hard floor insert. Note when hard floor cleaning is complete, remove hard floor insert and replace grooved base. Ensure rubber blades are pressed lightly on the surface of the floor; draw the tool slowly backwards and forwards until all traces of dirt have been removed.
PARQUET AND LAMINATE FLOORING	FLOOR TOOL HARD FLOOR INSERT 2 PIECE EXTENSION	LOW	ON	Remove grooved base from floor tool by pressing tab & replace with hard floor insert. Note when hard floor cleaning is complete, remove hard floor insert and replace grooved base. Before use; test on an inconspicuous area spot to ensure no damage is done to the surface of the flooring. Draw tool quickly across the floor surface. DO NOT direct steam or hold tool in one position as you may damage the varnish or delaminate the substrate. See above for floor tool preparation.
DUSTING HOUSEPLANTS	PISTOL GRIP ONLY	HIGH	OFF	Direct steam jet towards plant from a distance of 40-50cm. Use a soft dry cloth to remove and residual dust from the foliage.
COOKER HOODS COOKER HOBS (Gas)	DETAIL BRUSH DETAIL BRUSH NOZZLE VACUUM ATTACHMENT	HIGH	ON	Disconnect cooker/ hood from mains supply. Pre-spray greasy surfaces with Superclens Multi Surface degreaser. (Always test an inconspicuous area first; always read the label) Allow to soak in for at least a minute before applying steam jet and vacuum. Repeat cleaning steps as necessary. <b>Caution</b> Do not direct steam jet onto or into light fittings or wiring.
COOKER HOBS (Electric)	DETAIL BRUSH DETAIL BRUSH NOZZLE VACUUM ATTACHMENT	MEDIUM	ON	Disconnect cooker from mains supply. Pre-spray greasy surfaces with Superclens Multi Surface degreaser. (Always test an inconspicuous area first; always read the label) Allow to soak in for at least a minute before applying steam jet and vacuum. Repeat cleaning steps as necessary. <b>Caution</b> Do not direct steam jet onto or into light fittings or wiring.
COOKER HOBS (Ceramic)	SMALL SQUEEGEE	HIGH	ON	Disconnect cooker from mains supply. Pre-spray greasy surfaces with Superclens Multi Surface degreaser. (Always test an inconspicuous area first; always read the label) Allow to soak in for at least a minute before applying steam jet and vacuum. Repeat cleaning steps as necessary. <b>Caution</b> Do not direct steam jet onto or into light fittings or wiring.

